 
 


SRF KEY V2

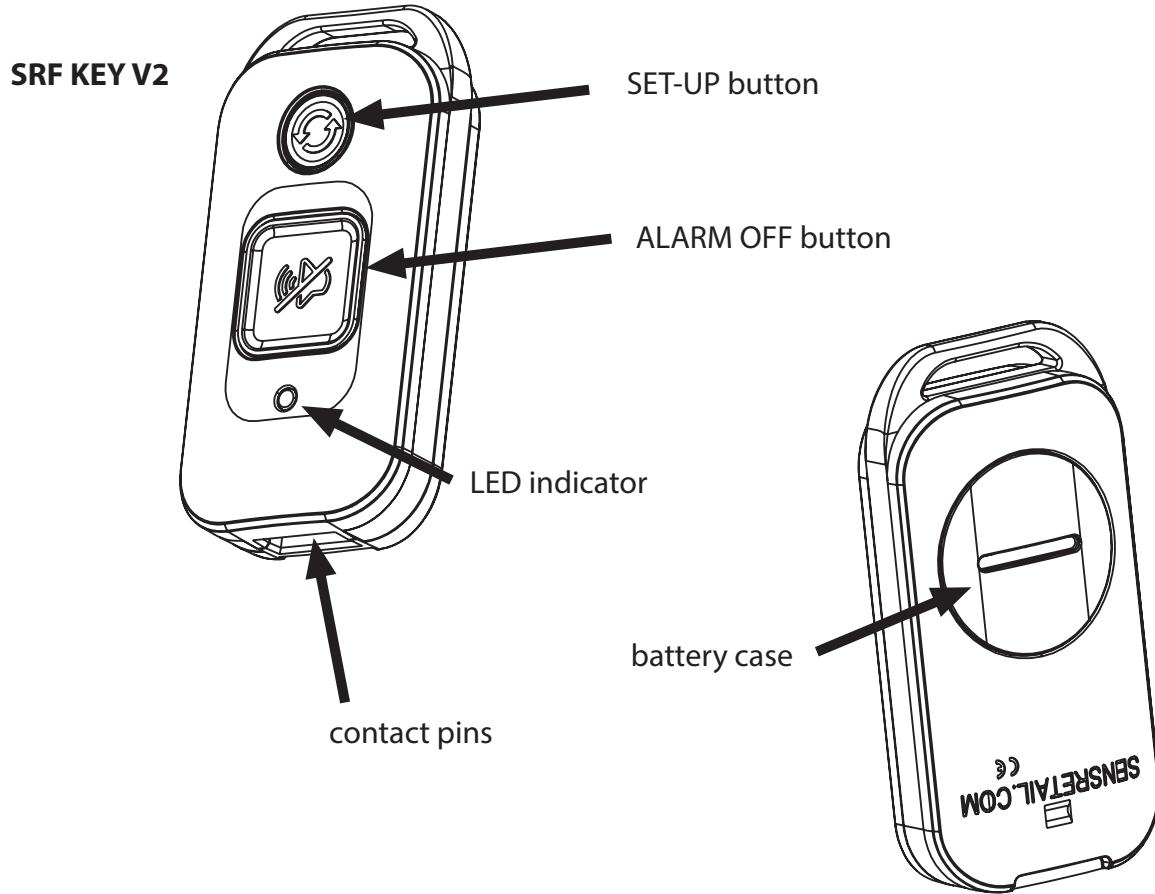

Activator for SRF KEY V2

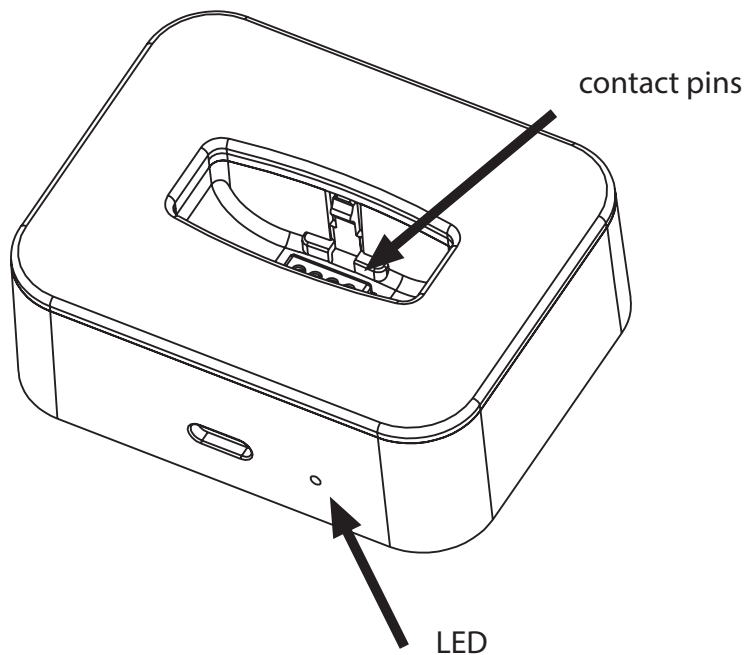

 
Activating UNO EVO (initial set-up)

1. Make sure the power adapter of the Activator for SRF Key V2 is connected to the mains.

2. Place the SRF Key into the Activator with push buttons facing forward.

3. If LED of the SRF key indicates a green light, it means that the SRF key is successfully activated for 12 hours use.

4. After 12 hours the code will automatically be erased and the SRF key has to be activated again for use.

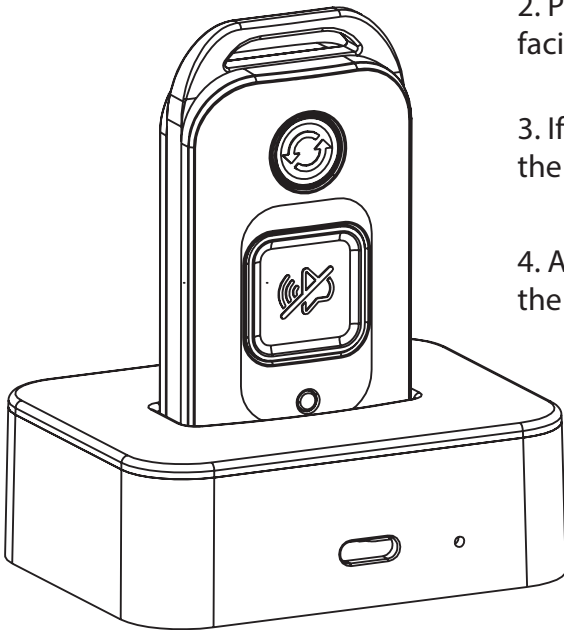

LED indication

When the SRF Key is ready for use, the LED shows green light when you press the Alarm-Off button.

When the LED shows a red light, the SRF Key is inactive and cannot be used to switch off the alarm.

The SRF Key is reactivated by inserting it in the Activator. A successful reactivation for 12 hours use is confirmed by the LED flashing green.

Battery

When the LED show a weak or no light while pressing one of the buttons, the battery needs to be exchanged.

Unlock the battery cover by turning it clockwise and replace the battery by a new one (CR2450).

